



**Mute**

**Standby\***

**Home**

(use to access Main Menu)

**Hotspot Mode**

(hold for 3 seconds when prompted from Harmony Setup Mobile App)

**Only use this section if your Harmony™ Player is connected to a screen.**

**Directional Arrows & OK**

**Back**

(Can also be used to hide virtual keyboard)

**Next Music Program**

**Volume Up**

**Previous Music Program**

**Volume Down**

**Resets your music schedule**

**Each number will correspond to a Music Program preloaded on your Harmony player.\*\***

*\* Standby mode cannot be used during your location's Opening Hours. To change your Opening Hours, visit [harmony.moodmedia.com](http://harmony.moodmedia.com) and tap "Locations."*

*\*\* If you're listening to a Playlist that you have created, you may use the remote control to navigate to any of the music slots included in your schedule. The selected music will play until the next scheduled change, or you can return to the scheduled music by pressing 0.*